

## DIGITAL INPUTS BOARD FOR CD PLAYERS CD SIGNATURE

### Enclosed:

- 1 digital input board.
- 1 plastic button.
- 3 screws.



**Careful: before any intervention, switch off your appliance and unplug all cables.**


- 1) Unscrew the back cover.



- 2) Get off the top cover (4 screws).

- 3) Fix the ribbon flex of the digital board on the connector of the main board.

- 4) Put the plastic cover and the card in the slot provided and screw it to the main chassis with the screws provided.

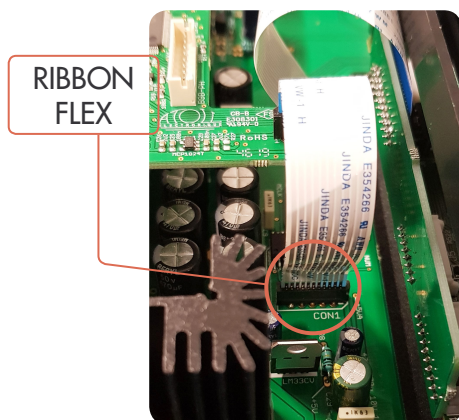

- 5) Close the appliance.



**Using: see CD Signature owner's manual.**